


600T125-54 WEB STIFFENER W/ (4) #10-16 SCREWS LOCATE WEB STIFFENER AT GIRDER LOCATIONS

STEEL STUD HEADER (2) STUD MEMBERS (2) TRACK MEMBERS

ATTACH HEADER MEMBERS TOGETHER W/ (2) #10-16 SCREWS @ 12" O.C.

∠ 2"x2"x14 GA. (50 KSI) x 0'-5 1/2" LONG W/ W/ (4) #10-16 SCREWS @ EACH LEG

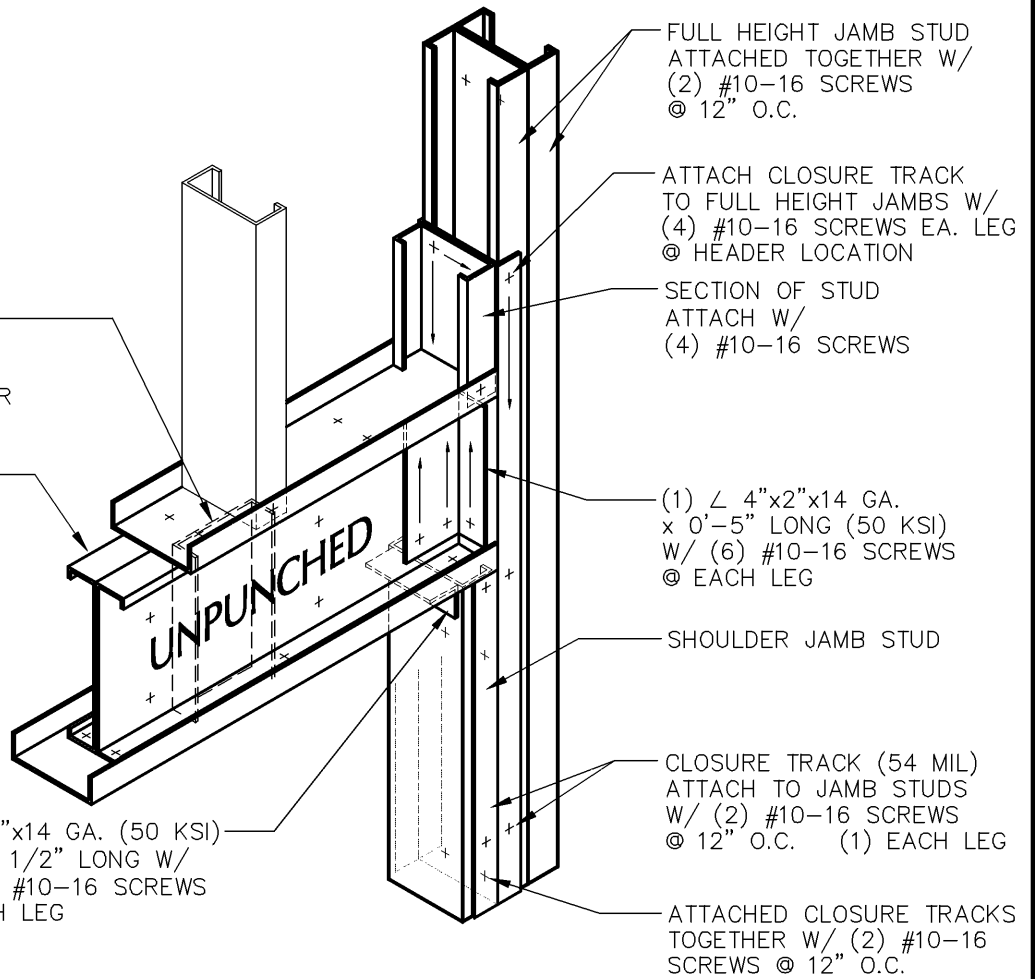

FULL HEIGHT JAMB STUD ATTACHED TOGETHER W/ (2) #10-16 SCREWS @ 12" O.C.

ATTACH CLOSURE TRACK TO FULL HEIGHT JAMBS W/ (4) #10-16 SCREWS EA. LEG @ HEADER LOCATION

SECTION OF STUD ATTACH W/ (4) #10-16 SCREWS

(1) ∠ 4"x2"x14 GA. x 0'-5" LONG (50 KSI) W/ (6) #10-16 SCREWS @ EACH LEG

SHOULDER JAMB STUD

CLOSURE TRACK (54 MIL) ATTACH TO JAMB STUDS W/ (2) #10-16 SCREWS @ 12" O.C. (1) EACH LEG

ATTACHED CLOSURE TRACKS TOGETHER W/ (2) #10-16 SCREWS @ 12" O.C.

TELLING™



BUILDSTRONG

6272 CENTER STREET  
MENTOR, OHIO 44060  
PHONE: 440-974-3370

DETAIL IS FOR REFERENCE ONLY. NOT FOR CONSTRUCTION.

DETAIL PROVIDED BY:



100 CAMELOT DRIVE  
FOND DU LAC, WI 54935  
PHONE: (920) 926-9800

# LOAD BEARING HEADER – JAMB ATTACHMENT