


600T125-54 WEB
STIFFENER W/
(4) #10-16 SCREWS
LOCATE WEB STIFFENER
AT GIRDER LOCATIONS

STEEL STUD HEADER
(2) STUD MEMBERS
(2) TRACK MEMBERS

ATTACH HEADER MEMBERS
TOGETHER W/ (2) #10-16
SCREWS @ 12" O.C.

LOW HEADER:
(1) TRACK MEMBERS

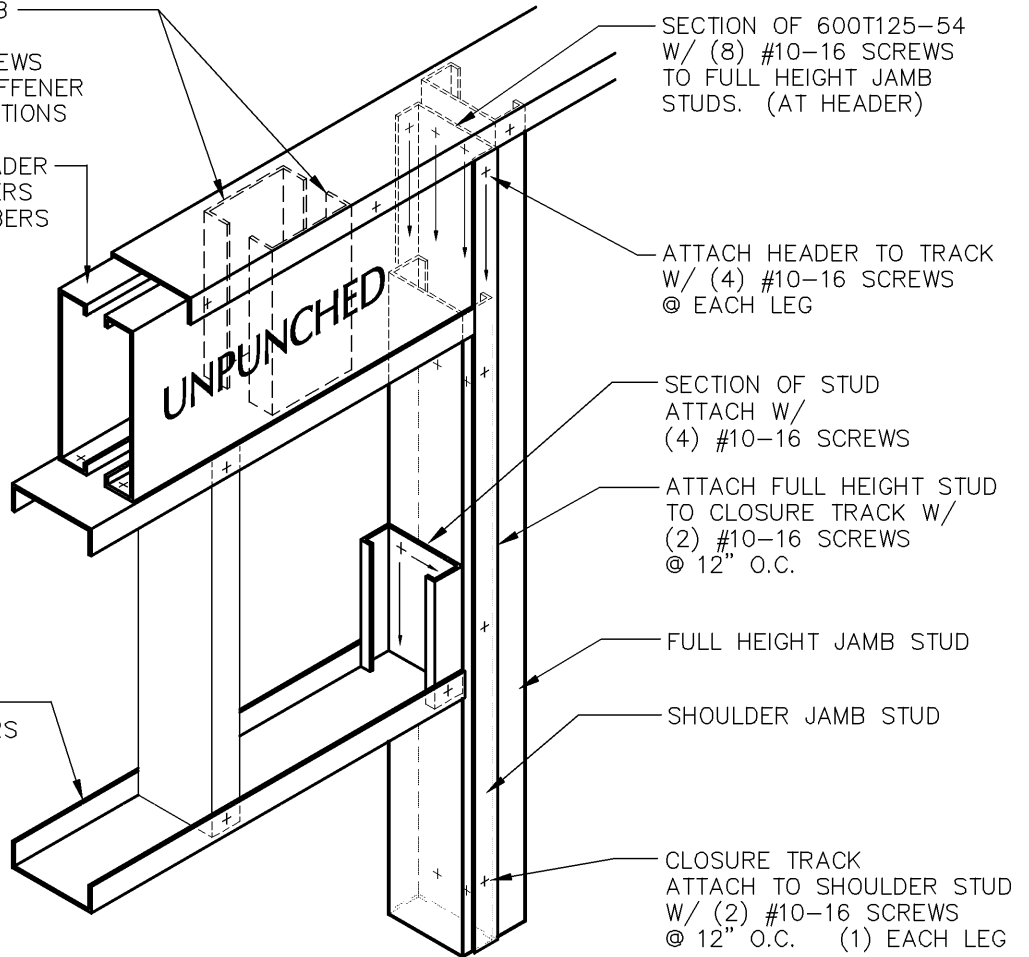

SECTION OF 600T125-54
W/ (8) #10-16 SCREWS
TO FULL HEIGHT JAMB
STUDS. (AT HEADER)

ATTACH HEADER TO TRACK
W/ (4) #10-16 SCREWS
@ EACH LEG

SECTION OF STUD
ATTACH W/
(4) #10-16 SCREWS

ATTACH FULL HEIGHT STUD
TO CLOSURE TRACK W/
(2) #10-16 SCREWS
@ 12" O.C.

FULL HEIGHT JAMB STUD

SHOULDER JAMB STUD

CLOSURE TRACK
ATTACH TO SHOULDER STUD
W/ (2) #10-16 SCREWS
@ 12" O.C. (1) EACH LEG

TELLING™



BUILDSTRONG

6272 CENTER STREET
MENTOR, OHIO 44060
PHONE: 440-974-3370

DETAIL IS FOR
REFERENCE ONLY.
NOT FOR CONSTRUCTION.

DETAIL PROVIDED BY:



100 CAMELOT DRIVE
FOND DU LAC, WI 54935
PHONE: (920) 926-9800

LOAD BEARING HEADER – JAMB ATTACHMENT